 
## ⚠ Be sure to read this page before using and after re-assembling the Hit-Air.

Thank you for using the Hit-Air.

For your safety, peace of mind and correct use of your airbag jacket, make sure that items **1-6** are confirmed before use as follows:



- OUnless the Hit-Air is set correctly, it may not work or may cause a malfunction. Caution OUnless the Hit-Air is set correctly, it may not more to the Once a CO2 cartridge is activated, it cannot be used again. Remove it from the key box without fail.
  - Use a Hit-Air CO<sup>2</sup> cartridge only. Do not use any other one.

 


 
No seal is attached in case re-assembling is done by yourself Unused CO2 cartridge and the key box are properly sealed at

 
the time of shipment.(\*The key ball is set)
\*In some countries or regions, the hit-air is sold without the security-check-sticker on it. If this is the case, please make sure that an unused CO2 cartridge of the correct size is properly installed to the key box.

- The right size (capacity)cartridge for the model is installed.
- A CO2 cartridge is tightly screwed into the key box
- An used/empty cartridge should not be installed.

Caution Re-assembling after the activation must be done in accordance with "Re-assembling Key Box" (see page 26 to 28)







**6**A coiled wire is set properly.





CO<sup>2</sup>

gas cartridge

**Key Box** 

Slide cover

Key Ball It will be activated when the key ball



Photo 12

1

(21 otod4).xod Close the zipper around the key the hole of the key box cover. 12. Take the connector out through

Таке the





may not be activated/inflated. completely and firmly, the HII-AIF If the cartridge is not seated CAUTION

cartridge is not punctured and Please confirm if the seal of the (Photo 11)

11. Screw a new CO2 cartridge.

Change

If a problem listed below is found on the Hit-Air, consult with an authorized dealer to change or repair/replace.

- 1. Fabric part becomes frayed or torn. And/or the inner tube (white polyurethane film)
- 2. A crack or rust is found on the "key box" or on the gas cartridge.
- 3. The "coiled wire" or the "wire loop" gets scraped and frayed.
- 4. Considerable change of color or deterioration of material is found.



as gnidesW 🔳 📶

7-2 Re-assembling Key Box ..... 1-1 How to Ke-assemble ...... 20 Me-assembling Hit-Air after Activation 20

Attention after Activation 19

F-4 Where and how to fix a Coiled Wire E-3 Attaching Coiled Wire to Motorcycle .....

Connecting Coiled Wire and Hit-Air C-1 One-touch Release .....

ar TiA-tiH gnisU = 4-E Hit-Air CO2 gas cartridge · ·

4-5 Hit-Air Structure d-d Key Ball · · · · · · · · · Key Box .....

···· Air Cushion ···· 

11 Structure 11

Name and Shape 9

General Information 7

Safety Precautions OPlease carry this booklet whenever you use the Hit-Air.

OThank you for your purchase.

For the proper use of the Hit-Air, please read this booklet carefully before use. **NZEKIZ CNIDE** 

