


*枠線は無し



Protection structure

Double structure of the airbag and protector for shock-buffering on the neck.

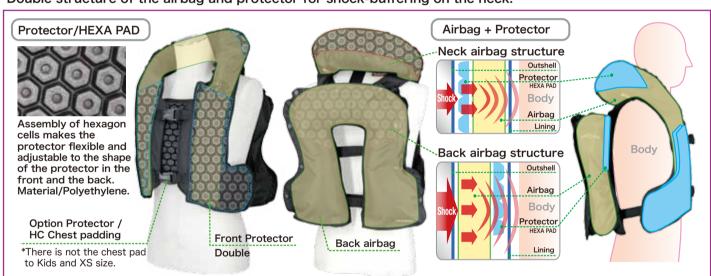

Air Valve (Supply and Exhaust)





Manual inflation by pumping from the air valve.

Air Valve (Supply Exhaust)





Guideline for Inflation



Start pumping air after checking all buttons are fastened. The buttons are unfastened automatically after a certain volume of air is pumped. The hardness of the right collar bone part should be the same hardness as the attached sponge.

(Some more pushes are required after all button were unfastened.)

The attached sponge

*Please check the hardness at the right collar bone part. The other parts have different hardness.



*Please don't pump up too much. Over-inflated vest doesn't improve the protection performance.

Size

