


Take the responsibility for correct dismantling and assembling. In case of washing or mending of the vest/jacket, the Hit-Air has to be dismantled and assembled carefully and correctly, otherwise it may not work as originally intended or may be damaged.


How to dismantle the airbag system (Key Box B-type)

1. Remove the plastic gas cartridge cover by hexagon wrench (3mm).

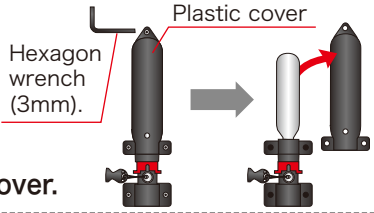

*Some has no plastic cover.


Velcro to fixing the airbag system

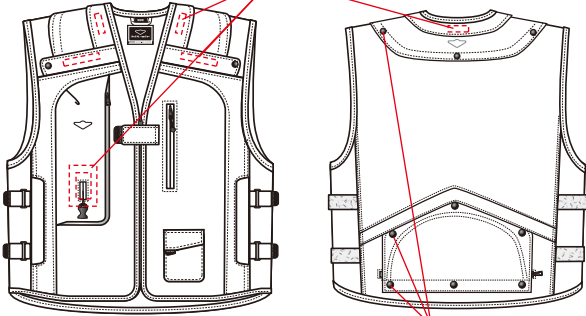

Button to fixing the airbag system


2. Unscrew the CO2 cartridge to remove.

CAUTION Never attempt to turn, loosen or remove the CO2 cartridge except for reassembling.

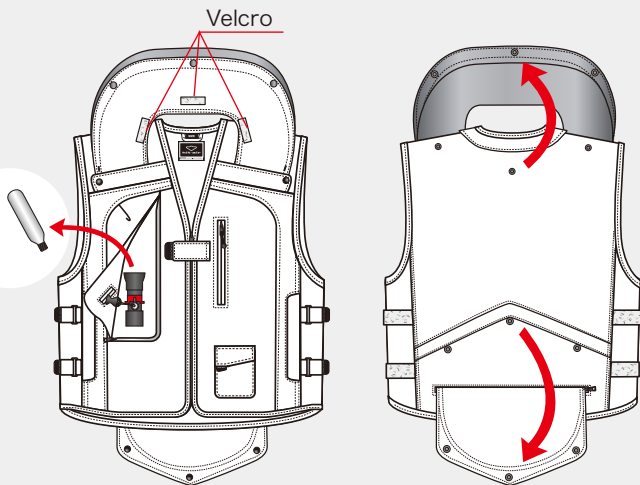

3. Unfasten plastic buttons and Velcro of the neck and hip cushions.

4. Fully open the front zipper and the zipper across the lower part of the inside of the vest/jacket.

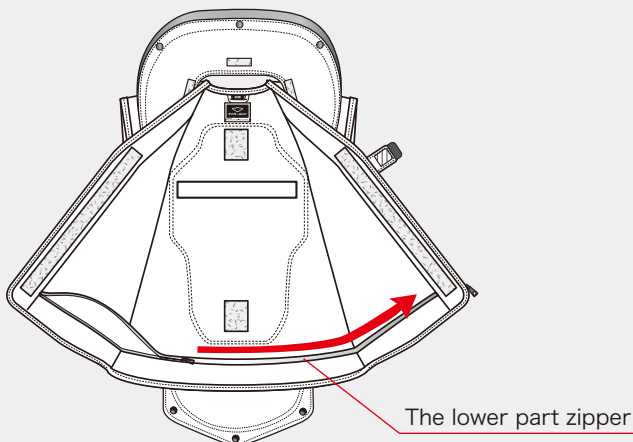

5. Open 3 zippers for the key box (A), for the back cushion (B) and for the body cushion (C) of the inside of the vest/jacket.

Zipper to join the key box to the vest/jacket.


A Zipper

Zipper to join the back cushion to the vest/jacket

B Zipper

Zipper to join the body cushion to the vest/jacket

C Zipper

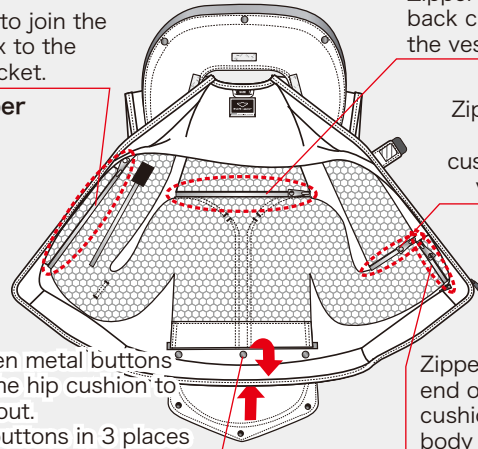

Unfasten metal buttons fixing the hip cushion to take it out.
Metal buttons in 3 places
(2 places in case of the packed hip cushion type)

Zipper to join the end of the neck cushion to the body cushion.


D Zipper

6. Open the fastener (D)

7. The neck and pull it in the direction of an arrow to be separated from the vest/jacket.

CAUTION

Don't pull air cushions by force. It may cause damage to the Hit-Air.

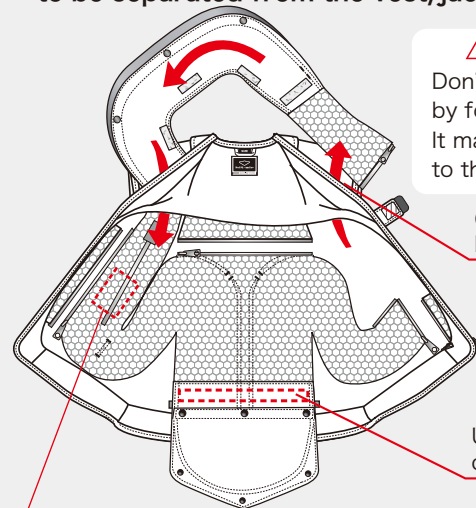

Opening of the left shoulder


Unfasten Velcro on the back

8. Unfasten Velcro around the key box opening to separate from the vest/jacket.

9. Dismantle is complete

CAUTION

Do not wash! Airbag and Protectors.

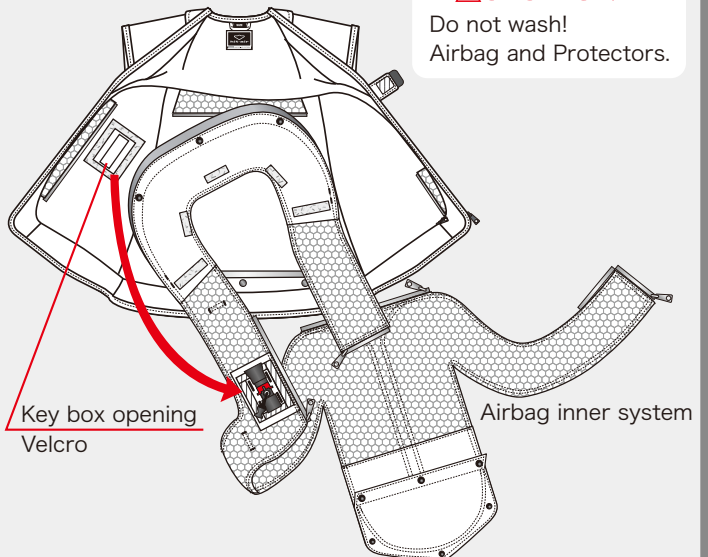

Key box opening
Velcro

Airbag inner system