



MUGEN DENKO CO., LTD.

1-1012 Ikeba Tempaku-ku Nagoya 468-0055 JAPAN
 phone +81-52-807-7750 fax +81-52-807-7901
 E-mail mugen@hit-air.com
 URL www.hit-air.com

HAM-AIO-Y-E-HR180911

EVERYDAY USE

AIRBAG SYSTEM
Manual


※Read carefully before use.



hit-air
 SHOCK BUFFERING SYSTEM

Horse Riding

AIRBAG JACKET
ALL-IN-ONE AIRBAG
USER'S GUIDE

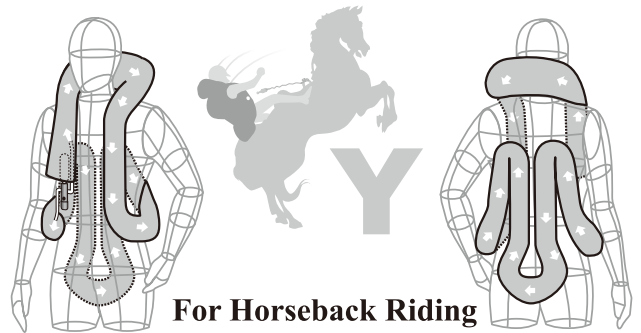

For Horseback Riding

< Y-type Key Box >

www.hit-air.com


2

Be sure to read this User's Guide to use the Hit-Air properly. A maintenance check by an authorized dealer once a year is recommendable for your safety and peace of mind.

Caution! Without a knot, the wire may come off the Hit-Air at its activation and the airbag will not inflate.

5 Tie a knot tightly to fix a coiled wire to the saddle. A knot works as the stopper to prevent the wire coming off when the Hit-Air is activated.

4 Make sure that the setting bolt has been removed from the key box.
 The setting bolt is a tool to be used for setting the key ball into the hole of the key box for re-assembly. (see page 23 to 24 in detail).
 *The Hit-Air will not be activated if the setting bolt remains in the key box.
 Make sure that the setting bolt is removed from the key box before using the Hit-Air.

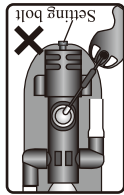

3 Is there any deterioration of the wire loop or the coiled wire?
 If so, replace it with a new one. Its replacement in every 1 to 2 years is recommendable.

*An unused cartridge is to be installed in accordance with "Re-assembling Key Box" (see page 22 to 25).
 A CO₂ cartridge with a hole at its bottom is unusable.

If there is a hole at its bottom, it is an used/empty one and not usable. Replace it with a new one.

A CO₂ cartridge with no hole at its bottom is usable.

Caution! If a CO₂ cartridge is screwed into the key box loosely, it may cause a malfunction. (See "Re-assembling Key Box" in page 25)
 If there is no hole - it is an unused cartridge to be installed in the key box for use. If there is no hole at its bottom (at the screw end)

2 If the CO₂ cartridge and the key box are not sealed or if the seal attached is torn at the time of the purchase of a new product, remove the cartridge and make sure that there is no hole at its bottom (at the screw end)

*A description of the size label varies from model to model.
 *Replacement gas cartridge list
 http://www.hit-air.com
 visit our website
 check it against the Hit-Air catalogue, or
 *If the right size for the model is not clear, it may cause a malfunction.
 *If sizes shown as above are not the same, that shown at the back of the key box cover are the same.
 (*Some model has no size label attached)

1 The size (capacity) of the cartridge varies from model to model. Make sure that the size (capacity) shown on the seal attached to the CO₂ cartridge and that shown at the back of the key box cover are the same.

25

END



10 Take the female side of the one-touch connector out through the hole of the key box cover and close the key box cover. (Photo 10)

CAUTION! If the cartridge is not seated completely and firmly, the Hit-Air may not be activated/inflate.



9 Install an unused CO₂ cartridge (Photo 9)
 Screw an unused gas cartridge until it is firmly seated, do not over tighten. If there is a problem with firmness, consult with an authorized dealer.
 Tighten 締める
 Screw an unused CO₂ cartridge on the seal attached to the cartridge