

Be sure to read this page before using and after re-assembling the Hit-Air.

Thank you for using the Hit-Air.
For your safety, peace of mind and correct use of your airbag jacket, make sure that items ①-⑥ are confirmed before use as follows:

Caution ⚠️
 ○ Unless the Hit-Air is set correctly, it may not work or may cause a malfunction.
 ○ Once a CO² cartridge is activated, it cannot be used again. Remove it from the key box without fail.
 ○ Use a Hit-Air CO² cartridge only. Do not use any other one.

- ① **A CO² cartridge of the right size (capacity) for the model is installed.**
 The seal attached the cartridge shows its size (capacity).
- ② **Sealed properly (No damage to the seal)**
 *No seal is attached in case re-assembling is done by yourself.
 Unused CO² cartridge and the key box are properly sealed at the time of shipment. (*The key ball is set)
 *In some countries or regions, the hit-air is sold without the security-check-sticker on it. If this is the case, please make sure that an unused CO² cartridge of the correct size is properly installed to the key box.
 - The right size (capacity) cartridge for the model is installed.
 - A CO² cartridge is tightly screwed into the key box.
 - An used/empty cartridge should not be installed.
- Caution** ⚠️ **Re-assembling after the activation must be done in accordance with "Re-assembling Key Box" (see page 26 to 28)**
- ③ **The red slide cover is lifted to the "unlocked"(up) position.**
- ④ **Is there any deterioration of the wire loop or the coiled wire?**
- ⑤ **A screw hole at the bottom of the key box is visible.**
 (The setting bolt is removed)
- ⑥ **A coiled wire is set properly.**
 See "Attaching Coiled wire to Saddle" (page 22 to 24)

⚠️ **Be sure to tie a knot tightly.**

①

②

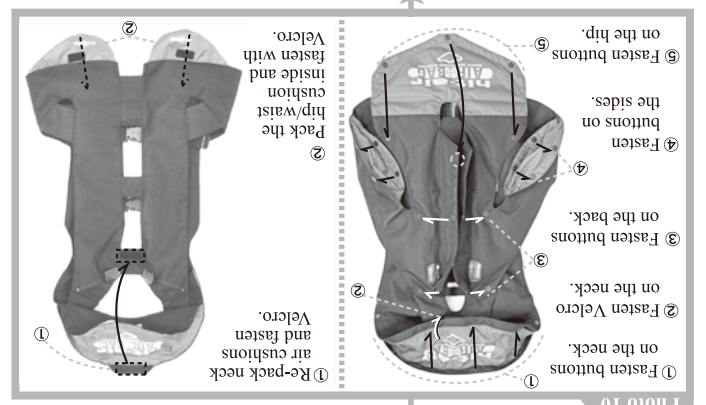


Photo 10
 (Photo 10)
 10. Re-pack all air cushions and fasten all buttons and Velcro.



Photo 9

9. Remove air from the vest.
 To remove all remaining gas from the air cushion, spread the Hit-Air vest, face down on a flat smooth surface. By pressing down each cushion using your hands, remove gas completely.
 Do not fold or roll up the Hit-Air vest to avoid damages inside. It may take time to release all the gas in the air cushion but it is necessary as it cannot be re-assembled with gas left remaining in any of the air cushion. (Photo 3)
CAUTION ⚠️
 If the gas left remaining in any of the air cushion, it cannot be re-assembled.

8 Washing

1. Hit-Air airbag system should not be washed/laundered. ⚠️ This Airbag cannot be washed.
 2. It should not be dipped in the water. ❌ ❌ ❌ ❌ ❌
 3. It should be dried in the shade if it gets wet.
- How to remove stains.
- Wipe with a wet towel.
 - Hang the Hit-Air (without detaching the CO² cartridge) and spray water with a hose or shower as trying not to wet the keybox part.

9 How to Store

- Keep the Hit-Air by hanging up on a coat hanger. Do not fold or lay anything on it. Avoid high temperature and high humidity.
 For longer life and safety, avoid the following conditions:
1. High temperature. (Under the direct sunlight, in the closed automobile, near the heater or open flames, etc.)
 2. Exposure to rain or extreme moisture, including steam and high humidity
 3. Storing items on top of the Hit-Air airbag system
 4. Leaving Hit-Air within the reach of children, pets or other animals
 5. Folded or rolled up (Being placed on a hanger is preferable.)

10 Change

- If a problem listed below is found on the Hit-Air, consult with an authorized dealer to change or repair/replace.
1. Fabric part becomes frayed or torn. And/or the inner tube (white polyurethane film) is exposed.
 2. A crack or rust is found on the "key box" or on the gas cartridge.
 3. The attached parts are damaged. (e.g. Coiled wire/Bungee lanyard, Key ball set)
 4. Considerable change of color or deterioration of material is found.

②

③

Thank you for your purchase.
 ○ For the proper use of the Hit-Air please read this booklet carefully before use.
 ○ Please carry this booklet together with "User's Guide for Accessories" whenever you use the Hit-Air.

1	Safety Precautions	5
2	General Information	7
3	Name and Shape	9
4	Structure	11
4-1	Function	11
4-2	Air Cushion	11
4-3	Key Box	12
4-4	Key Ball	13
4-5	Hit-Air Structure	13
4-6	CO ² Gas Cartridge	14
5	Using Hit-Air	15
5-1	One-touch Release	15
5-2	Connecting Coiled Wire and Hit-Air	16
5-3	Attaching Coiled Wire to Saddle	17
5-4	How to fix a Coiled Wire	19
6	Attention after Activation	20
7	Re-assembling Hit-Air after Activation	21
7-1	How to Re-assemble	21
7-2	Re-assembling Key Box	22
8	Washing	26
9	How to Store	26
10	Change	26